


1. DRAIN ENGINE OIL

- (a) Remove the oil filler cap.
- (b) Remove the oil drain plug, then drain the oil into a container.
- (c) Clean and install the oil drain plug with a new gasket.

Torque: 38 N·m (387 kgf·cm, 28 ft·lbf)

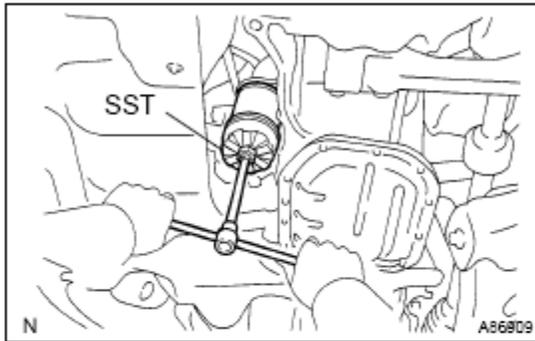


2. REMOVE OIL FILTER SUB-ASSY

- (a) Using SST, remove the oil filter.
SST 09228-06501

3. INSTALL OIL FILTER SUB-ASSY

- (a) Check and clean the oil filter installation surface.
- (b) Apply clean engine oil to the gasket of a new oil filter.

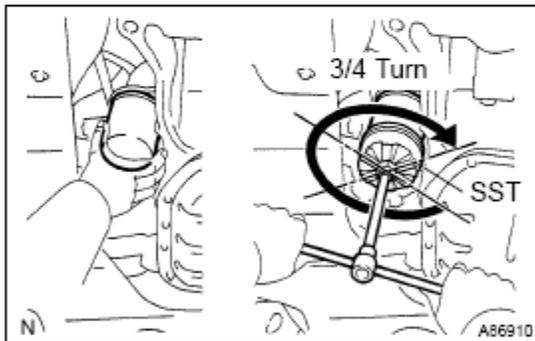

- (c) Lightly screw the oil filter into place, and tighten it until the gasket contacts the seat.
- (d) Using SST, retighten it by a 3/4 turn.
SST 09228-06501

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

4. ADD ENGINE OIL

- (a) Fill with fresh engine oil.

Capacity:

Drain and refill with oil filter replacement 3.7 liters (3.9 US qts, 3.3 Imp. qts)

Drain and refill without oil filter replacement 3.4 liters (3.6 US qts, 3.0 Imp. qts)

Dry fill 4.1 liters (4.3 US qts, 3.6 Imp. qts)

- (b) Install the oil filler cap.

5. INSPECT ENGINE OIL (See page 17-1)